

UNINTERRUPTIBLE POWER Supply

700VA ÷ 3KVA

UPS MODELS:

SEP 700 NP – SEP 1000 NP – SEP 1500 NP – SEP 2200 NP – SEP 3000 NP
SEP 1000 ER NP – SEP 2200 ER NP – SEP 3000 ER NP

MANUALE d'INSTALLAZIONE ED USO

INSTALLATION AND USE MANUAL

INSTALLATIONS- UND BEDIENUNGSANLEITUNG

MANUEL d'INSTALLATION ET d'UTILISATION

MANUAL DE INSTALACIÓN Y USO

INTRODUCTION

Thank you for choosing our product.

Our company is specialised in designing, developing and manufacturing uninterruptible power supplies (UPS).

The UPS described in this manual is a high quality product which has been carefully designed and built in order to guarantee the highest levels of performance.

This device can be installed by anyone on the condition that he/she has **READ THE USER AND SAFETY MANUAL CAREFULLY.**

The UPS and the Battery Box internally generate DANGEROUS electrical voltages. All maintenance operations must be carried out SOLELY by qualified operators.

This manual contains detailed instructions for using and installing the UPS and the Battery box.

For information about using and making the most of the performance of your device, please keep hold of the CD containing this manual and read it carefully before operating the equipment.

ENVIRONMENTAL PROTECTION

In the development of its products, the company devotes abundant resources to analysing the environmental aspects. All our products pursue the objectives defined in the environmental management system developed by the company in compliance with applicable standards.

No hazardous materials such as CFCs, HCFCs or asbestos are used in this product.

When evaluating packaging, the choice of material has been made favouring recyclable materials.

For correct disposal, please separate and identify the type of material of which the packaging is made in the table below. Dispose of all material in compliance with applicable standards in the country in which the product is used.

| <i>DESCRIPTION</i> | <i>MATERIAL</i> |
|---------------------------|------------------------|
| Box | Cardboard |
| Packaging corner | Stratocell |
| Protective bag | Polythene |
| Accessories bag | Polythene |

DISPOSING OF THE PRODUCT

The UPS and the Battery Box contain electronic cards and batteries which are considered TOXIC and HAZARDOUS waste. When the product reaches the end of its operating life, dispose of it in accordance with applicable local legislation. Disposing of the product correctly contributes to respecting the environment and personal health.

© The reproduction of any part of this manual, in whole or in part, is forbidden without the prior consent of the manufacturer. In order to make improvements, the manufacturer reserves the right to modify the product described at any moment and without notice.


CONTENTS

| | |
|--|-----------|
| PRESENTATION | 5 |
| <i>UPS VIEWS</i> | 6 |
| <i>FRONT VIEW</i> | 6 |
| <i>REAR VIEW</i> | 6 |
| <i>DISPLAY PANEL VIEW</i> | 8 |
| <i>BATTERY BOX (ACCESSORY NOT PROVIDED WITH UPS)</i> | 9 |
| <i>REAR VIEW</i> | 9 |
| INSTALLATION | 10 |
| <i>INITIAL CONTENT CHECK</i> | 10 |
| <i>INSTALLATION ENVIRONMENT</i> | 11 |
| <i>BATTERY BOX INSTALLATION</i> | 11 |
| <i>SETTING THE NOMINAL BATTERY CAPACITY</i> | 11 |
| USE | 12 |
| <i>CONNECTIONS AND SWITCHING ON FOR THE FIRST TIME</i> | 12 |
| <i>SWITCHING ON FROM THE MAINS</i> | 12 |
| <i>SWITCHING ON FROM THE BATTERY</i> | 12 |
| <i>SWITCHING OFF THE UPS</i> | 12 |
| <i>DISPLAY PANEL MESSAGES</i> | 13 |
| <i>UPS STATUS MESSAGES</i> | 13 |
| <i>MEASUREMENT DISPLAY AREA</i> | 14 |
| <i>CONFIGURING THE OPERATING MODE</i> | 15 |
| <i>POSSIBLE SETTINGS</i> | 15 |
| <i>ADDITIONAL FUNCTIONS</i> | 15 |
| <i>SOFTWARE</i> | 16 |
| <i>MONITORING AND CONTROL SOFTWARE</i> | 16 |
| <i>CONFIGURATION SOFTWARE</i> | 16 |
| <i>UPS CONFIGURATION</i> | 17 |
| <i>COMMUNICATION PORTS</i> | 19 |
| <i>RS232 CONNECTOR</i> | 19 |
| <i>COMMUNICATION SLOT</i> | 19 |


| | |
|-------------------------------|------------------|
| <i>TROUBLESHOOTING</i> | <i>20</i> |
| <i>ALARM CODES</i> | <i>22</i> |
| <i>FAULT</i> | <i>22</i> |
| <i>LOCK</i> | <i>23</i> |
| <i>TECHNICAL DATA</i> | <i>24</i> |

PRESENTATION

This **UPS** uses ON-LINE double conversion technology, resulting in the highest levels of reliability and maximum protection for critical loads such as servers, IT applications and Voice/Data.

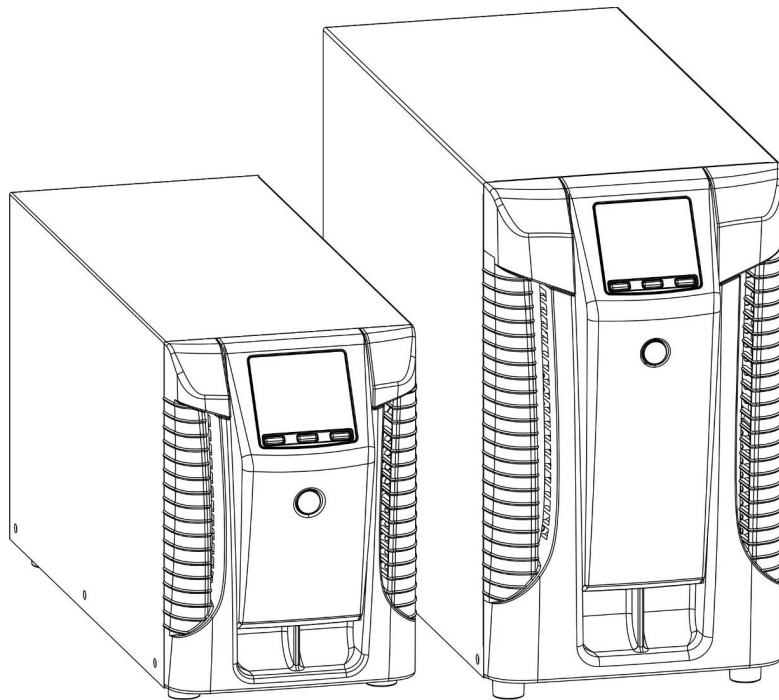


It is possible to use one or more autonomy expansion units known as **BATTERY BOXES** (optional accessories) with the same dimensions and aesthetic line as the UPS alongside it.

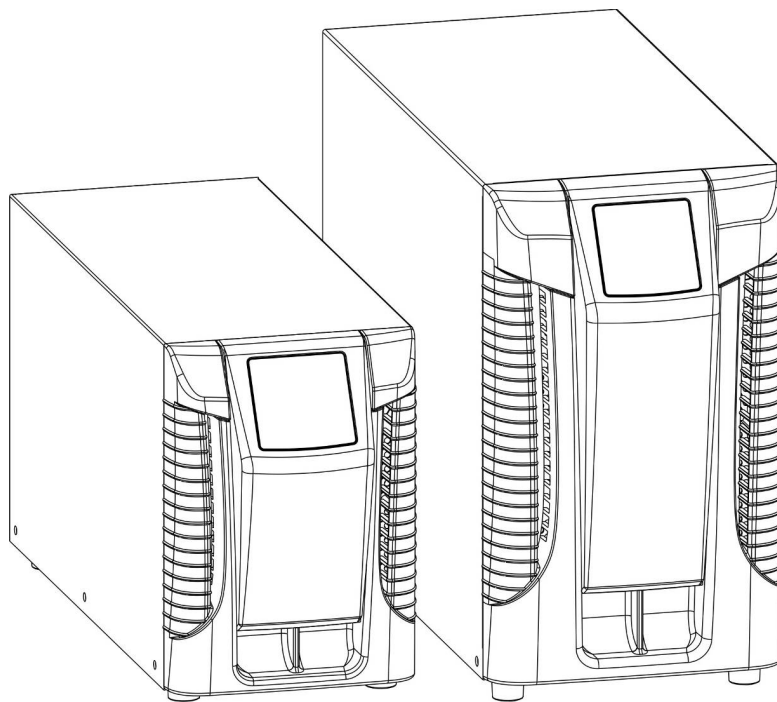

The **ER model** UPSs fitted with upgraded battery chargers are the solution for Business Continuity applications which require long battery-powered operating times. For these versions, the batteries are housed in separate cabinets which are designed to contain large, high-capacity batteries.


UPS VIEWS

FRONT VIEW

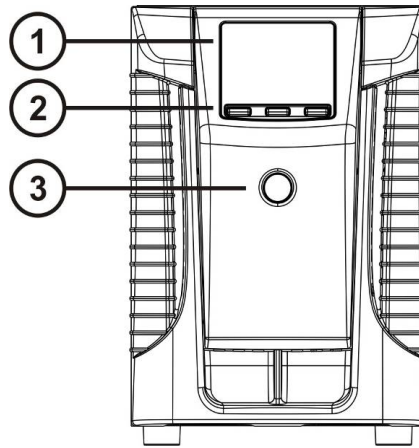


REAR VIEW

700VA / 1500VA model

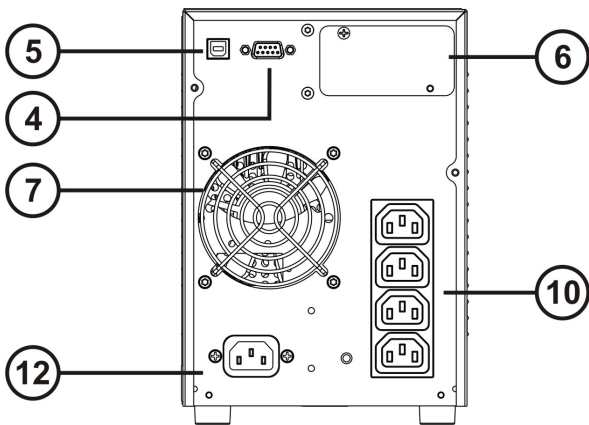


1000VA / 1000VA ER model

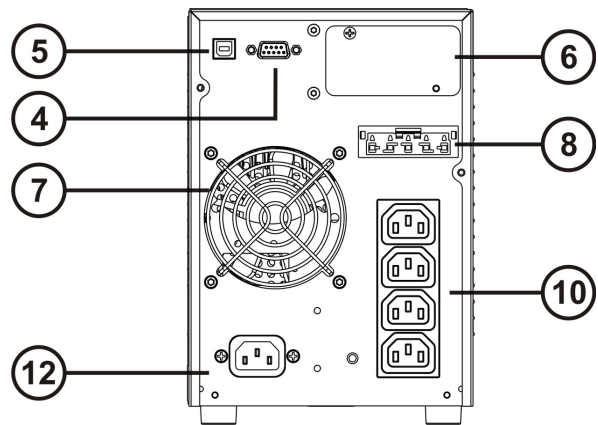


- | | |
|---|--------------------------------|
| ① Display | ⑥ Slot for communication cards |
| ② Multipurpose buttons | ⑦ Cooling fans |
| ③ ON/OFF switch | ⑧ Battery expansion connector |
| ④ RS232 communication port and contacts | ⑩ IEC 10A output socket |
| ⑤ USB communication port | ⑫ IEC 10A input plug |

2200VA model

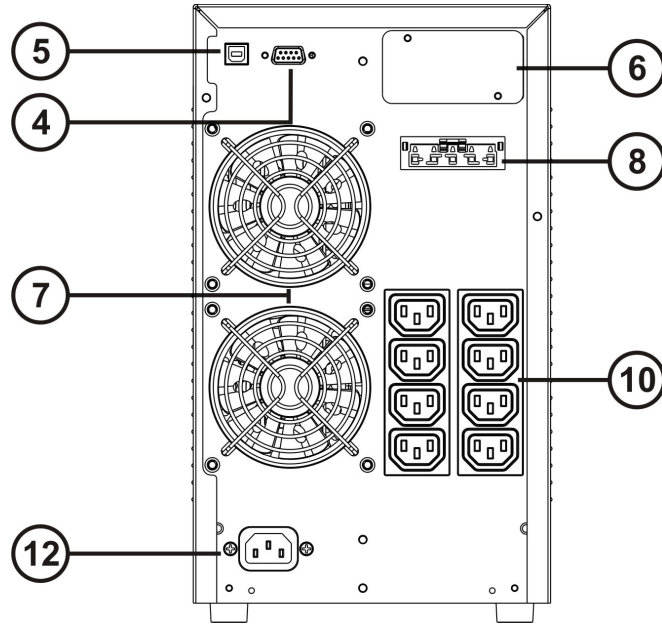


2200VA ER / 3000VA / 3000VA ER model

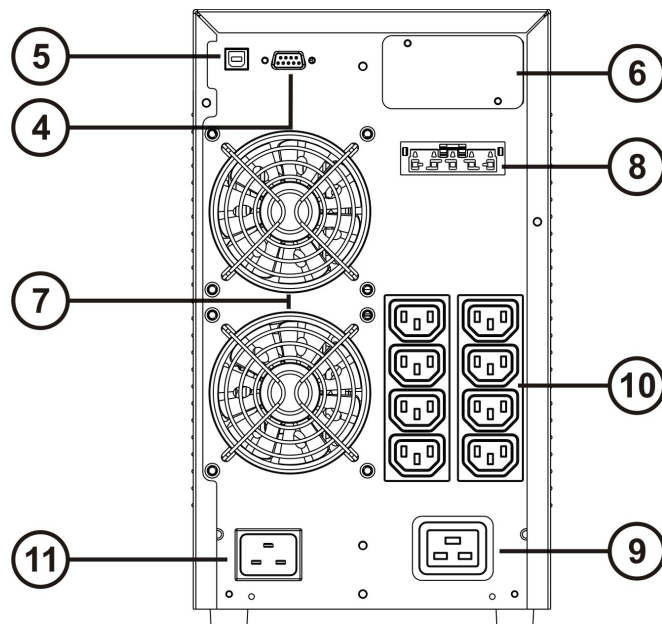

- | | | | |
|---|---------------------------------------|---|--|
| ④ | RS232 communication port and contacts | ⑨ | IEC 16A output socket (only for 3000VA models) |
| ⑤ | USB communication port | ⑩ | IEC 10A output socket |
| ⑥ | Slot for communication cards | ⑪ | IEC 16A input plug |
| ⑦ | Cooling fans | ⑫ | IEC 10A input plug |
| ⑧ | Battery expansion connector | | |

DISPLAY PANEL VIEW

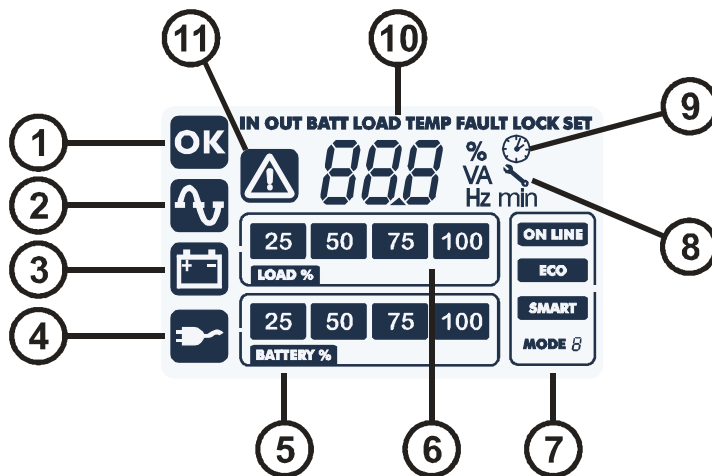

- | | |
|--------------------------|----------------------------|
| Ⓐ "SEL" button (Select) | ⑤ Battery charge indicator |
| Ⓑ "ON" button | ⑥ Load level indicator |
| Ⓒ "STAND-BY" button | ⑦ Configuration area |
| ① Regulation operation | ⑧ Maintenance request |
| ② Mains operation | ⑨ Timer |
| ③ Battery operation | ⑩ Measurement display area |
| ④ Load powered by bypass | ⑪ Stand-by / alarm |


BATTERY BOX (ACCESSORY NOT PROVIDED WITH UPS)

The BATTERY BOX is an optional accessory dedicated to this range of UPSs (same dimensions and aesthetic line). The BATTERY BOX contains batteries which allow the operating time of the uninterruptible power supplies to be increased during extended blackouts. The number of batteries contained can vary according to the type of UPS for which the BATTERY BOX is intended. It is therefore necessary to take great care to ensure that the battery voltage of the BATTERY BOX is the same as the voltage permitted by the UPS.


It is possible to connect further BATTERY BOXES in order to create a chain, suitable for achieving any autonomy time without mains power.

REAR VIEW

36V Battery Box

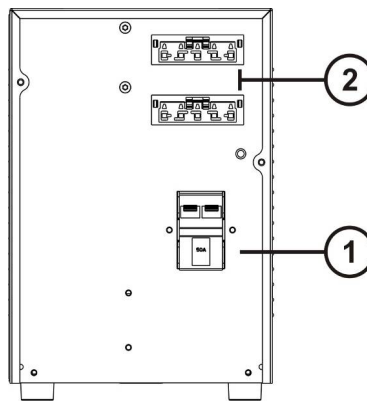

72V Battery Box

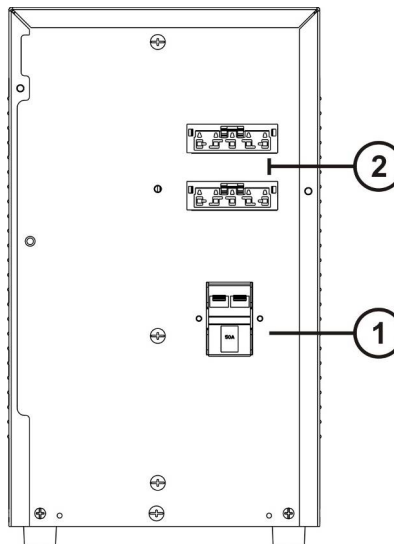

① Battery disconnecter (SWBATT)


② Battery expansion connector

INSTALLATION


INITIAL CONTENT CHECK

After opening the packaging, it is first necessary to check the contents.
The package must contain:


UPS

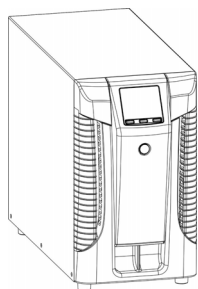


Schuko power cable - IEC 10A
(IEC 16A for 3000VA models only)

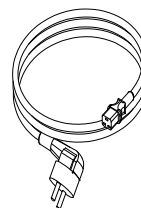


IEC 10A connection cable

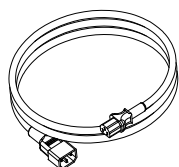


IEC 16A male plug
(For 3000VA models only)

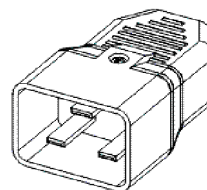


USB cable

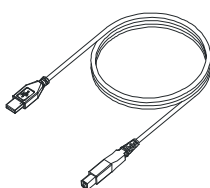

User manual CD + Safety manual

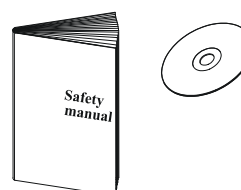

Battery expansion plug
(ER version only)

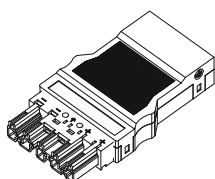

INSTALLATION ENVIRONMENT

The UPS and the Battery Box must be installed in ventilated, clean environments which are sheltered from bad weather. The relative humidity in the environment must not exceed the maximum values shown in the Technical Data table. The ambient temperature, whilst the UPS is in operation must remain between 0 and 40°C, and the UPS must not be positioned in places which are exposed to direct sunlight or to hot air.



The recommended operating temperature for the UPS and the batteries is between 20 and 25°C. The actual operating life of the batteries is 5 years on average with an operating temperature of 20°C. If the operating temperature reaches 30°C, the operating life is halved.



This is a category C2 UPS product. In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures.


BATTERY BOX INSTALLATION



CAUTION:

**CHECK THAT THE BATTERY BOX VOLTAGE IS THE SAME AS THE VOLTAGE PERMITTED BY THE UPS.
CHECK THE RATING ON THE BACK OF THE DEVICE.**

It is possible to connect more than one Battery Box in order to achieve any level of autonomy without mains power. Connect any Battery Boxes in a cascade as shown in the figure below:

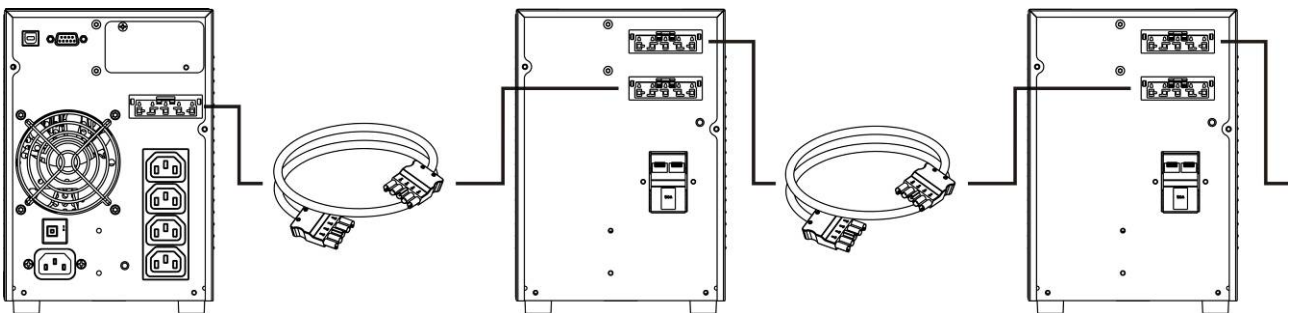

SETTING THE NOMINAL BATTERY CAPACITY

Before installing one or more Battery Boxes the UPS must be configured in order to update the nominal capacity value (total Ah UPS's internal batteries + external batteries) using the dedicated configuration software **UPSTools** contains in the CD-ROM supplied with the UPS.

The battery box must be installed while the UPS is switched off and disconnected from the main.



CAUTION:

The connection cables cannot be extended by the user.


After connecting the UPS to its Battery Boxes, insert the fuses and turn the Battery Box battery isolators (SWBATT) to the ON position.

It is not possible to connect more than one UPS to a single battery box, or to several Battery Boxes connected in a series.



To check whether a new version of the most up-to-date software is available, consult the website


CONNECTIONS AND SWITCHING ON FOR THE FIRST TIME

- 1) Check that there is a protection device against overcurrents and short circuits in the system upstream from the UPS. The recommended protection value is 10A (for the 700VA, 1000VA and 1500VA versions) and 16A (for the 2200VA, 3000VA and ER versions) with a B or C trip curve.
- 2) Power the UPS using the input cable provided.
- 3) Press the ON/OFF switch located on the front panel.
- 4) After a few moments, the UPS will switch on, the display will light up, there will be a beep and the  icon will start to flash. The UPS is in stand-by mode: meaning that it is only consuming a small amount of power. The microcontroller is powered which supervises the self-diagnoses; the batteries are charging; everything is ready for UPS activation. Battery operation is also in stand-by mode provided that the timer is active.
- 5) Connect the equipment to be powered to the sockets on the back of the UPS, using the cable supplied or a cable no longer than 10 metres.
CAUTION: do not connect equipment which absorbs more than 10A to the IEC 10A sockets. For equipment which exceeds this level of absorption, use the IEC 16A socket only (available on the 3000VA version).
- 6) Check which operating mode is set on the display and, if necessary, see the “**Configuring operating modes**” paragraph to set the required mode. For advanced UPS configurations execute the software UPSTools which can be downloaded from the web site.

SWITCHING ON FROM THE MAINS

- 1) Press the “ON” button for 1 second. After pressing it, all the icons on the display light up for 1 second and the UPS beeps.
- 2) Switch on the equipment connected to the UPS.


When switching on for the first time only: after 30 seconds, check that the UPS is operating correctly:

- 1) Simulate a blackout by disconnecting power to the UPS.
- 2) The load must continue to be powered, the  icon on the display must light up and there must be a beep every 4 seconds.
- 3) When power is reconnected, the UPS must go back to operating from the mains.

SWITCHING ON FROM THE BATTERY

- 1) Press the ON/OFF switch located on the front panel.
- 2) Hold down the “ON” button for at least 5 seconds. All the icons on the display light up for 1 second.
- 3) Switch on the equipment connected to the UPS.

SWITCHING OFF THE UPS










In order to switch off the UPS, hold down the “STBY” button for at least 2 seconds. The UPS goes back to stand-by mode and the  icon starts to flash:

- 1) If the mains power is present, the ON/OFF switch must be pressed to completely turn off the UPS.
- 2) During battery mode operation with the timer not set, the UPS automatically switches off after 30 seconds. If, on the contrary, the timer is set, press and hold down the “STBY” key for at least 5 seconds to turn off the UPS. For complete shutdown, press the ON/OFF switch.

DISPLAY PANEL MESSAGES

This chapter describes, in detail, the various information that can be displayed on the LCD.

UPS STATUS MESSAGES

| ICON | STATUS | DESCRIPTION |
|---|----------|--|
|  | Fixed | Indicates a fault |
| | Flashing | The UPS is in stand-by mode |
|  | Fixed | Indicates regular operation |
|  | Fixed | The UPS is operating from the mains |
| | Flashing | The UPS is operating from the mains, but the output voltage is not synchronised with the mains voltage |
|  | Fixed | The UPS is operating from the battery. In this condition, the UPS emits an acoustic signal (beep) at regular 4-second intervals. |
| | Flashing | Low battery pre-alarm. Indicates that battery autonomy is coming to an end. In this condition, the UPS emits a beep at regular 1-second intervals. |
|  | Fixed | Indicates that the loads connected to the UPS are powered by the bypass |
|  | Dynamic | Indicates the estimated percentage charge of the batteries |
|  | Dynamic | Indicates the percentage of charge applied to the UPS compared with the nominal value. |
|  | Flashing | Maintenance is required. Contact the support centre. |
|  | Fixed | Indicates that the timer is active (programmed switch-on and switch-off). The timer can be activated/deactivated using the software provided. |
| | Flashing | 1 minute until the UPS switches back on or 3 minutes until it switches off |

MEASUREMENT DISPLAY AREA






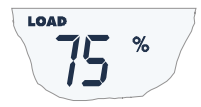

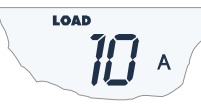

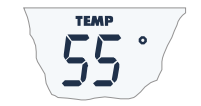


It is possible to display the most important measurements regarding the UPS in sequence on the display.

When the UPS is switched-on, the display shows the main voltage value.

To display a different measurement, press the "SEL" button repeatedly until the desired measurement appears.

In the event of a fault/alarm (FAULT) or a lock (LOCK), the display will automatically show the type and code of the corresponding alarm.

Some examples are shown below:

| GRAPHIC EXAMPLE ⁽¹⁾ | DESCRIPTION | GRAPHIC EXAMPLE ⁽¹⁾ | DESCRIPTION |
|---|--|--|--|
|  | Mains voltage |  | Battery charge percentage |
|  | Mains frequency |  | Total battery voltage |
|  | UPS output voltage |  | Applied load percentage |
|  | Output voltage frequency |  | Current absorbed by the load |
|  | Residual battery autonomy |  | Temperature of the electronics cooling system inside the UPS |
|  | Fault / Alarm ⁽²⁾ : the corresponding code is displayed |  | Lock ⁽²⁾ : the corresponding code is displayed |

⁽¹⁾ The values shown in the images in the table are purely as an indication.

⁽²⁾ The FAULT / LOCK codes can only be displayed if they are active (presence of a fault/alarm or a lock).

CONFIGURING THE OPERATING MODE

The area of the display shown in the figure displays the active operating mode and allows the user to choose other modes directly from the display panel.



HOW TO PROCEED:

- To access the configuration area, hold down the “SEL” button for at least 3 seconds.
- The icon corresponding to the mode currently set lights up.
- To change the mode, press the “ON” button.
- To confirm the mode chosen, hold down the “SEL” button for at least 3 seconds.

POSSIBLE SETTINGS

The UPS is designed to be configured in various operating modes:

- **ON-LINE** is the mode with the greatest load protection and the best quality of the output waveform (*)
- **ECO** is the mode with which the UPS consumes the least power, so is therefore the most efficient (**)
- **SMART ACTIVE:** in this mode, the UPS decides whether to operate in ON-LINE or ECO mode according to a statistic about the quality of the mains power.
- **STAND-BY OFF [Mode 1]:** the UPS operates as an emergency power supply. If mains power is present, the load is not powered, however should the mains supply fail, the load is powered by the UPS.

(*) The effective value (rms) of the output frequency and voltage is constantly controlled by the microprocessor, independently from the waveform of the mains voltage, maintaining the output frequency synchronised to the mains within a configurable range. Outside this range, the UPS output de-synchronises from the mains supply, moving to the nominal frequency; in this condition, the UPS cannot use the bypass.

(**) In order to optimise performance, in ECO mode, the load is normally powered by the bypass. If the mains goes out of the permitted tolerance range, the UPS switches to ON LINE operation. If the mains returns within the permitted tolerance range for at least five minutes, the UPS goes back to powering the load from the bypass.

ADDITIONAL FUNCTIONS

MANUAL BYPASS

Using the Manual Bypass feature, the UPS can be switched to bypass. In this condition the load is powered directly by the input mains, any disruption in the mains directly affects the load.



CAUTION:
BEFORE CARRYING OUT THE FOLLOWING SEQUENCE OF OPERATIONS, ENSURE THAT THE UPS'S INPUT AND OUTPUT FREQUENCY COINCIDE AND THAT THE UPS IS NOT OPERATING FROM THE BATTERY

Attention: even when the UPS is switched on, the load is disconnected in the event of a mains blackout.


If the input mains deviates from the established tolerances, the UPS automatically switches to Stdby mode and disconnects the load.

To force the UPS into manual bypass mode, press and hold down the ON and SEL keys simultaneously for at least 4 seconds.

The code “C02” appears on the display.

To return to the normal operation mode press the ON and SEL keys again for at least 4 sec..

SOFTWARE

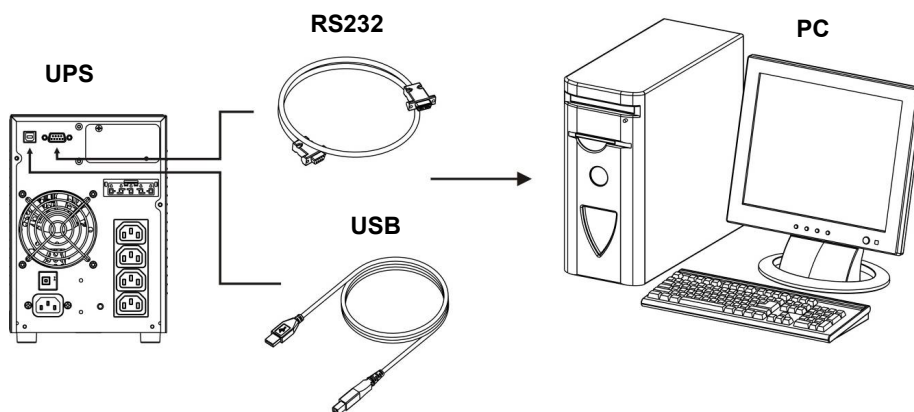

MONITORING AND CONTROL SOFTWARE

The **NetworkMonitor 3** software guarantees effective, intuitive UPS management, displaying all the most important information such as input voltage, applied load, battery capacity. It is also able to perform shutdown operations and send e-mails, text messages and network messages automatically when certain events, selected by the user, occur.

INSTALLATION OPERATIONS

- 1) Connect one of the UPS's communication ports to one of the PC's communication ports using the cable supplied.
- 2) Download the software from the web site selecting the specific operating system.
- 3) Follow the installation program instructions.
- 4) For more detailed information please read the user manual which can be downloaded from the web site.

CONFIGURATION SOFTWARE

The **UPSTools** software allows the configuration and full display of the status of the UPS via USB or RS232. For a list of possible configurations available to the user, refer to the UPS Configuration paragraph.

INSTALLATION OPERATIONS

- 1) Connect one of the UPS's communication ports to one of the PC's communication ports using the cable supplied.
- 2) Follow the installation instructions shown within the software manual which can be located in the UPSTools directory or downloaded from the web site.

CAUTION:

If the RS232 communication port is used, it is not possible to communicate with the USB port and vice versa.

It is advisable to use a cable which is shorter than 3 metres for communication with the UPS.

To obtain additional communication ports with different functions, independent from the standard USB and RS232 ports on the UPS, various accessories are available which can be inserted into the communication card slot.



To check whether new, more up-to-date software versions are available and for more information about the accessories available, consult the website.

UPS CONFIGURATION

The table below illustrates all the possible configurations available to the user in order to best adapt the UPS to individual requirements. It is possible to perform these operations using the Upstools software.

| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|--|---|----------|---|
| Output frequency | Selects the nominal output frequency | Auto | <ul style="list-style-type: none"> • 50 Hz • 60 Hz • Auto: automatic learning of the input frequency |
| Output voltage | Selects the nominal output voltage | 230V | 220 - 240 in 1V steps |
| Operating mode | Selects one of the 4 different operating modes | ON LINE | <ul style="list-style-type: none"> • ON LINE • ECO • SMART ACTIVE • STAND-BY OFF (MODE 1) |
| Bypass operation | Selects the mode of use of the bypass line | Normal | <ul style="list-style-type: none"> • Normal • Disabled with input/output synchronisation • Disabled without input/output synchronisation |
| Power-off due to minimum charge | Automatic UPS power-off in battery operation mode if the charge is lower than 5% | Disabled | <ul style="list-style-type: none"> • Enabled • Disabled |
| Autonomy limit | Maximum battery operation time | Disabled | <ul style="list-style-type: none"> • Disabled (complete battery discharge) • (1 - 65000) sec. in 1 sec steps |
| Battery low warning | Estimated autonomy time remaining for the battery low warning | 3 min. | (1 - 255) min. in 1 min steps |
| Battery test | Interval of time for the automatic battery test | 40 hours | <ul style="list-style-type: none"> • Disabled • (1 - 1000) h in 1 hour steps |
| Maximum charge alarm threshold | Selects the user overcharge limit | Disabled | <ul style="list-style-type: none"> • Disabled • (0 - 103) % in 1% steps |
| Input frequency tolerance range | Selects the permitted range for the input frequency for switching to the bypass and for the synchronisation of the output | ± 5% | (±3 - ±10) % in 1% steps |

* For configurations of the $F_{out} = 50, 60\text{Hz}$ or if the sync is disabled with the input, the UPS downgrades the output power.


| FUNCTION | DESCRIPTION | DEFAULT | POSSIBLE CONFIGURATIONS |
|---|--|-------------------------|--|
| Bypass voltage thresholds | Selects the permitted voltage range for switching to the bypass | Low: 180V High: 264V | <ul style="list-style-type: none"> • Low: 180 - 200 in 1V steps • High: 250 - 264 in 1V steps |
| Bypass voltage threshold for ECO | Selects the permitted voltage range for operation in ECO mode | Low: 200V High: 253V | <ul style="list-style-type: none"> • Low: 180 - 220 in 1V steps • High: 240 - 264 in 1V steps |
| Intervention sensitivity for ECO | Selects the intervention sensitivity during operation in ECO mode | Normal | <ul style="list-style-type: none"> • Low • Normal • High |
| Power-on delay | Waiting time for automatic switching back on after mains power returns | 5 sec. | <ul style="list-style-type: none"> • Disabled • (1 - 255) sec. in 1 sec steps |
| Remote power-on/off function | Selects the function associated with the RS232 connector. | Disabled | <ul style="list-style-type: none"> • Disabled • Remote ON • Remote OFF • Remote ON/OFF |

COMMUNICATION PORTS

On the back of the UPS (see *UPS Views*), the following communication ports are present:

- RS232 connector
- USB connector
- Expansion slot for additional communication cards

RS232 CONNECTOR

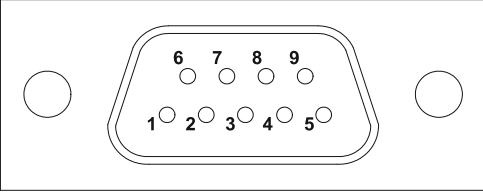
| RS232 CONNECTOR | | |
|--|---|---|
|  | | |
| PIN # | SIGNAL | NOTES |
| 1 | Programmable output *: [default: UPS in lock] | (*) Opto-isolated contact max. +30Vdc / 35mA. These contacts can be associated with other events using the software provided (**) Opto-isolated command +5 - 15Vdc. These contacts can be associated with other events using the software provided For further information about interfacing with the UPS, refer to the manual provided |
| 2 | TXD | |
| 3 | RXD | |
| 4 | Programmable input **: [default: disabled] | |
| 5 | GND | |
| 6 | Power supply DC ($I_{max} = 20mA$) | |
| 7 | Programmable input **: [default: disabled] | |
| 8 | Programmable output *: [default: low battery pre-alarm] | |
| 9 | Programmable output *: [default: battery operation] | |

COMMUNICATION SLOT

The UPS is equipped with an expansion slot for optional communication cards (see figure on right) which allows the device to communicate using the main communication standards.

Some examples:

- Second RS232 and USB port
- Serial duplicator
- Ethernet network card with TCP/IP, HTTP and SNMP protocols
- JBUS / MODBUS protocol converter card
- PROFIBUS protocol converter card
- Card with relay isolated contacts

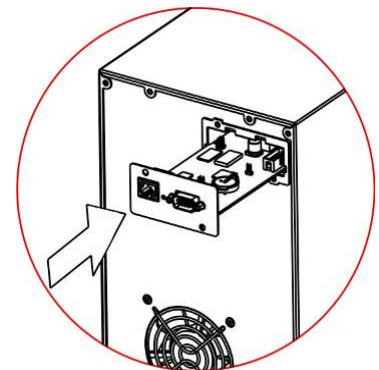

To check whether further accessories are available, consult the website.

TROUBLESHOOTING

Irregular UPS operation is most likely not an indication of a fault but due to simple problems or distraction. It is therefore advisable to consult the table below carefully as it summarises information which is useful for solving the most common problems.

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|--|--|
| THE DISPLAY DOES NOT LIGHT UP | ON/OFF SWITCH NOT PRESSED | Press the ON/OFF switch on the front panel. |
| | MAIN CONNECTION CABLE MISSING | Check that the power cable is connected correctly. |
| | NO MAINS VOLTAGE (BLACKOUT) | Check that the power reaches the socket where the UPS is connected (try it with a table lamp, for example). |
| | INTERVENTION OF THE INPUT CIRCUIT BREAKER | If present, reset the circuit breaker by pressing the button on the back of the UPS. CAUTION: Check that there is no output overload to the UPS. |
| THE DISPLAY IS ON BUT THE LOAD IS NOT POWERED | THE UPS IS IN STAND-BY MODE | Press the "ON" button on the front panel to power the loads. |
| | THE STAND-BY OFF MODE IS SELECTED | It is necessary to change mode. The STAND-BY OFF (emergency power supply) mode, in fact, only powers the loads in the event of a blackout. |
| | NO CONNECTION TO THE LOAD | Check the connection to the load. |
| THE UPS IS OPERATING FROM THE BATTERY DESPITE THE PRESENCE OF MAINS VOLTAGE | THE INPUT VOLTAGE IS OUTSIDE THE PERMITTED TOLERANCE RANGE FOR MAINS OPERATION | Problem with the mains. Wait until the input mains voltage returns within the tolerance range. The UPS will automatically return to mains operation. |
| | INTERVENTION OF THE INPUT CIRCUIT BREAKER | If present, reset the circuit breaker by pressing the button on the back of the UPS. CAUTION: Check that there is no output overload to the UPS. |
| THE UPS DOES NOT COME ON AND THE DISPLAY SHOWS THE CODE: A06, A08 | THE TEMPERATURE OF THE UPS IS LOWER THAN 0°C | Check the temperature of the environment in which the UPS is located; if it is too low, bring it past the minimum threshold (0°C). |
| THE DISPLAY SHOWS THE FOLLOW CODES: L10, L11, F11 | INPUT RELAY FAULTY | Switch off and disconnect the UPS from the power supply and contact the support centre. |
| THE DISPLAY SHOWS THE FOLLOW CODE: L02 | CONTROL CARD IS NOT INSERTED CORRECTLY | Switch off and disconnect the UPS from the power supply and contact the support centre. |

| PROBLEM | POSSIBLE CAUSE | SOLUTION |
|---|--|--|
| THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: A54, F50, F51, F52, F55, L50, L51, L52 | THE LOAD APPLIED TO THE UPS IS TOO HIGH | Reduce the load to within the threshold of 100% (or user threshold in the case of code A54). If the display shows a lock: remove the load and switch the UPS off and back on again. |
| THE DISPLAY SHOWS THE FOLLOW CODE: A61 | REPLACE THE BATTERIES | Contact the support centre for battery replacement. |
| THE DISPLAY SHOWS THE FOLLOW CODE: A62 | BATTERIES MISSING OR BATTERY BOX MISSING OR NOT CONNECTED | On the versions with an additional battery charger in place of the batteries, check that the Battery Box is inserted and connected to the UPS correctly. |
| THE DISPLAY SHOWS THE FOLLOW CODE: A63 | THE BATTERIES ARE FLAT; THE UPS IS WAITING FOR THE BATTERY VOLTAGE TO EXCEED THE SET THRESHOLD | Wait until the batteries have recharged or force power-on manually by holding down the "ON" button for at least 2 seconds. |
| THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: F03, F05, F07, F13, F21, F40, F41, F42, F43 | THE UPS IS MALFUNCTIONING; IT WILL PROBABLY LOCK SOON | If possible, disconnect the power to the load, switch the UPS off and back on again; if the problem occurs again, call the support centre. |
| THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: F04, L04 | THE TEMPERATURE OF THE DISSIPATORS INSIDE THE UPS IS TOO HIGH | Check that the temperature of the environment in which the UPS is located does not exceed 40°C. |
| THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: F53, L53 | THERE IS A FAULT ON ONE OR MORE OF THE UTILITIES POWERED BY THE UPS | Disconnect all the utilities, switch the UPS off and back on again, reconnect the utilities one at a time to identify which one is faulty. |
| THE BUZZER SOUNDS CONTINUOUSLY AND THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: F60, L03, L05, L07, L13, L20, L21, L40, L41, L42, L43 | THE UPS IS MALFUNCTIONING | If possible, disconnect the power to the load, switch the UPS off and back on again; if the problem occurs again, call the support centre. |
| THE DISPLAY SHOWS ONE OF THE FOLLOWING CODES: C01, C02, C03 | A REMOTE COMMAND IS ACTIVE | If unwanted, check the status of the command inputs on any optional contact card. |
| THE DISPLAY SHOWS C02 | THE MANUAL BYPASS FUNCTION IS ACTIVE | To exit manual bypass mode, press the ON+SEL buttons at the same time for at least 4 seconds. |

ATTENTION:



The UPS in case of a permanent failure will be not able to supply the load. To ensure total protection of your equipment we suggest you install an ATS device (Automatic Transfer Switch) or an external automatic by-pass.

For more information visit the web site

ALARM CODES

Using a sophisticated self-diagnosis system, the UPS is able to check its own status and any anomalies and/or faults which may occur during normal operation and display them on the display panel. If there is a problem, the UPS signals the event by showing the code and the type of active alarm on the display (FAULT and/or LOCK).

FAULT

FAULT alerts can be divided into three categories:

- **Anomalies:** these are “minor” problems which do not cause the lock of the UPS but reduce performance or prevent certain functions from being used.

| CODE | DESCRIPTION |
|------------|---|
| A06 | Sensor1 temperature under 0°C |
| A08 | Sensor2 temperature under 0°C |
| A54 | Load percentage greater than the user threshold set |
| A61 | Replace batteries |
| A62 | Batteries missing or Battery Box missing or not connected |
| A63 | Waiting for battery charging |

- **Alarms:** these are more critical problems than anomalies because, if they persist, they could cause the UPS to lock in a very short time.

| CODE | DESCRIPTION |
|------------|--|
| F03 | Incorrect auxiliary power supply |
| F04 | Dissipator overtemperature |
| F05 | Temperature sensor1 faulty |
| F07 | Temperature sensor2 faulty |
| F11 | Input relay faulty |
| F13 | Capacitor pre-charge failed |
| F21 | Capacitor bank overvoltage |
| F40 | Inverter overvoltage |
| F41 | Continuous output voltage |
| F42 | Incorrect inverter voltage |
| F43 | Inverter undervoltage |
| F50 | Overload: load > 103% |
| F51 | Overload: load > 110% |
| F52 | Overload: load > 150% |
| F53 | Short circuit |
| F55 | Waiting for load reduction to return to inverter |
| F60 | Battery overvoltage |

- **Active commands:** Indicates the presence of an active remote command.

| CODE | DESCRIPTION |
|------------|--|
| C01 | Remote control 1 (Switch On/Off) |
| C02 | Remote control 2 (load on bypass or manual bypass command) |
| C03 | Remote control 3 (Switch On/Off) |
| C04 | Battery test in progress |

LOCK

LOCK alerts are normally preceded by an alarm signal and their scale leads to the power-off of the inverter and the load being powered by the bypass line (this procedure is excluded for locks due to serious, persistent overloads and short circuits).

| CODE | DESCRIPTION |
|------------|---|
| L02 | Control card is not inserted correctly |
| L03 | Incorrect auxiliary power supply |
| L04 | Dissipator over temperature |
| L05 | Temperature sensor1 faulty |
| L07 | Temperature sensor2 faulty |
| L10 | Input fuse broken or input relay stuck (does not close) |
| L11 | Input relay faulty |
| L13 | Capacitor pre-charge failed |
| L20 | Capacitor bank undervoltage |
| L21 | Capacitor bank overvoltage |
| L40 | Inverter overvoltage |
| L41 | Continuous output voltage |
| L42 | Incorrect inverter voltage |
| L43 | Inverter undervoltage |
| L50 | Overload: load > 103% |
| L51 | Overload: load > 110% |
| L52 | Overload: load > 150% |
| L53 | Short circuit |

TECHNICAL DATA

| UPS MODELS | UPS SEP 700 NP | UPS SEP 1000 NP SEP 1000 ER NP | UPS SEP 1500 NP | UPS SEP 2200 NP SEP 2200 ER NP | UPS SEP 3000 NP SEP 3000 ER NP |
|------------|-------------------|--------------------------------------|--------------------|--------------------------------------|--------------------------------------|
|------------|-------------------|--------------------------------------|--------------------|--------------------------------------|--------------------------------------|

INPUT

| | | | | | | |
|---------------------------|-------|-----------------|-----|-----|-----|------|
| Nominal voltage | [Vac] | 220 - 230 - 240 | | | | |
| Maximum operating voltage | [Vac] | 300 | | | | |
| Nominal frequency | [Hz] | 50 - 60 | | | | |
| Nominal current (1) | [A] | 3.3 | 4.5 | 6.5 | 9.5 | 12.5 |

BATTERY

| | | | | | | |
|--|-----|--------------------------|-------|----------------|-------|-------|
| Recharge time (standard versions) | [h] | < 4h for 80% of the load | | | | |
| Expandability and nominal voltage of the Battery Box | | Not expandable | 36Vdc | Not expandable | 72Vdc | 72Vdc |
| Charging current (for ER versions only) | | Not applicable | 8A | Not applicable | 8A | 8A |

OUTPUT

| | | | | | | |
|------------------------------|-------|---|--------|--------|--------|--------|
| Nominal voltage (4) | [Vac] | Selectable: 220 / 230 / 240 | | | | |
| Frequency (2) | [Hz] | Selectable: 50, 60 or auto sensing | | | | |
| Nominal power | [VA] | 700VA | 1000VA | 1500VA | 2200VA | 3000VA |
| Nominal power | [W] | 560W | 800W | 1200W | 1760W | 2400W |
| Overload: 100% < load < 110% | | Bypass line available: activates the bypass after 2 seconds locks after 120 seconds Bypass line not available: locks after 60 seconds | | | | |
| Overload: 110% < load < 150% | | Bypass line available: activates the bypass after 2 seconds locks after 4 seconds Bypass line not available: locks after 4 seconds | | | | |
| Overload load > 150% | | Bypass line available: activates the bypass instantly locks after 1 second Bypass line not available: locks after 0.5 seconds | | | | |

OTHER

| | | | | | | |
|-------------------------------|------|--|----|----------------|-----------------|----|
| Leakage current to earth | [mA] | < 1,5mA | | | < 2mA | |
| Ambient temperature (3) | [°C] | 0 – 40 | | | | |
| Humidity | | < 90% without condensation | | | | |
| Protection devices | | excessively low batteries - overcurrent - short circuit - overvoltage - undervoltage - circuit breaker | | | | |
| Dimensions W x D x H | [mm] | 158 x 422 x 235 | | | 190 x 446 x 333 | |
| Weight | [kg] | 11 | 13 | 14 | 26 | 28 |
| Weight (for ER versions only) | [kg] | Not applicable | 7 | Not applicable | 14 | 15 |

For more details please consult the web site

- (1) at nominal load, nominal voltage of 230 Vac, battery charging
- (2) If the mains frequency is within $\pm 5\%$ of the selected value, the UPS is synchronised with the mains. If the frequency is out of the tolerance range or operating from the battery, the frequency is the one selected $\pm 0.1\%$
- (3) 20 - 25 °C for longer battery life
- (4) To keep the output voltage within the indicated range of precision, recalibration may be necessary after a long period of operation

| BATTERY BOX | | JSEP036-NPA- | JSEP036-NPM- | JSEP072-NPA- | JSEP072-NPM- |
|-------------------------|-------|-----------------|--------------|-----------------|--------------|
| Nominal battery voltage | [Vdc] | 36Vdc | | 72Vdc | |
| Dimensions W x D x H | [mm] | 158 x 422 x 235 | | 190 x 446 x 333 | |
| Weight | [kg] | 14 | 21 | 27 | 41 |

The "-" symbol replaces an alphanumeric code for internal use.

